



Gori 2-Blade Shaft Installation Instructions


Table of Contents

Gori 2-Blade Shaft Installation Instructions	1
Parts List	1
Schematic Drawings	2
Torque Settings for Shaft Nuts	2
Installing the Propeller	3
Removing the Propeller	4
Operating Instructions	5
Ahead	5
Astern	5
Sailing	5
Cleaning and Maintenance	6
Annual Maintenance	6
Underwater Installation	6

Parts List

1	Hub	1 x ea
2	Blades	2 x ea
3	Pins	2 x ea
4	Shaft nut	1 x ea
5	Nut locking Allen screw	1 x ea
6, 7	Blade pin locking Allen Screws	4 x ea

Schematic Drawings

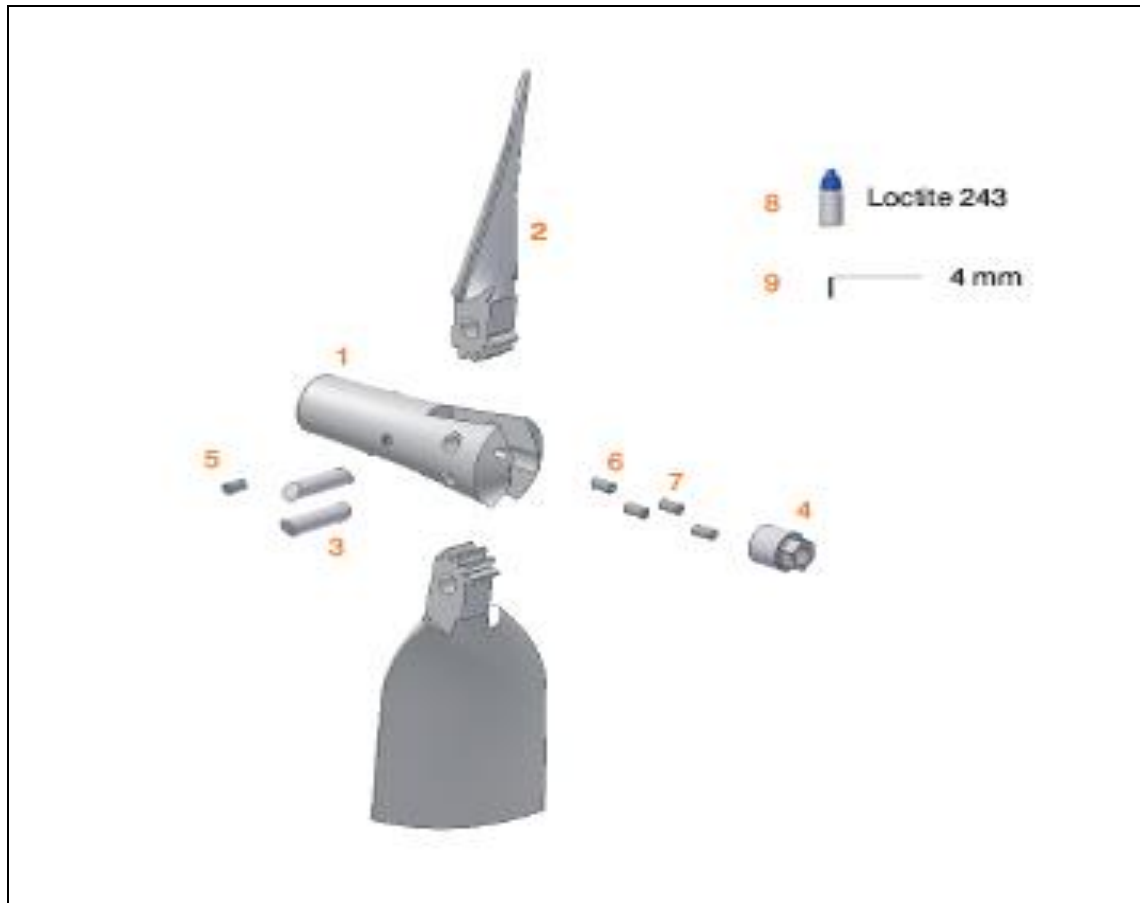

Torque Settings for Shaft Nuts

40Nm or 30ft/lb	60Nm or 45ft/lb	70Nm or 50 ft/lb	100Nm or 75ft/lb	125Nm or 75ft/lb
M14 X 2.0	M16 X 2.0	M16 x 1.5	M20 x 2.0	M20 X 2.5
M14 X 1.5	5/8" BSW	5/8" BSF		3/4 BSW
1/2" UNC	5/8" UNC	5/8" UNC		3/4" UNC
1/2" BSF				

135Nm or 100ft/lb	160Nm or 115ft/lb	225Nm or 165ft/lb
M20x1.5	7/8" UNC	M24 x 2.0
3/4" BSF		1" BSF
3/4" UNC		1" UNF

Installing the Propeller

The propeller is delivered assembled. This ensures that at the factory the propeller has been checked, and balanced before shipping.

1. Remove the two (6&7) M8 Allen screws per blade pin. Push blade pin (3) out - note blades, pins and hub are numbered for re-assembly. There are two (2) Allen screws per blade pin.
2. Check the fit of the hub (1) onto the shaft without the key. Check the key for fit, nicks and dings. There should be a slight gap at the top of the key. The taper fit is dry – do not use a lubricant on hub or shaft taper.
3. Check that the shaft (4) nut threads onto the shaft thread.
4. Mount the hub on the shaft with key in place and tighten/torque (see above torque settings) the nut (4) to the shaft. Use 22mm socket.
5. Apply Loctite-243 to the threads of the shaft nut locking M8 Allen screw (5). Install the screw into the hub to lock the shaft nut. Tighten the screw in place using the 4mm Allen key supplied.
6. Mount the blades (2) and the pins (3) to the hub. Be sure that you mount them in accordance to their numbers, i.e. #1 and #2 positions. Lightly grease the moving parts of the blades -gears- with water resistant grease after cleaning and repair.
7. Install M8 Allen screws (6,7) into aft end of hub using Loctite-243 on the threads. Total four (4) – two (2) per blade pin. The second screw is a locking screw. Tighten both in place using supplied Allen Wrench.
8. Check that the blades will move freely from open to closed.

Your Gori is water lubricated. At hauling, after cleaning, before storage, put a light “smear” of a waterproof grease over the blade/hub contact surfaces & gear teeth. This will allow you to check blade operation and stop oxidization of the metal when out of the water.

Removing the Propeller

1. Remove the two (6&7) M8 Allen screws per blade pin. Push blade pin (3) out - note blades, pins and hub are numbered for re-assembly. There are two (2) Allen screws per blade pin.
2. Unscrew the nut locking set screw (5) from the hub (1).
3. Using a 22mm socket unscrew the shaft nut (4) using a 22mm socket.
4. Remove the hub off the shaft taper using a prop puller. Retain key.

Operating Instructions

Ahead

The propeller will operate in the standard forward setting when the blades open, due to the centrifugal force of the shaft when in gear.

Astern

If the boat has not been used for sometime, it is wise to shift cautiously between forward and reverse a few times before going out sailing in order to clean the teeth of the blades and the gears from further fouling.

In the reverse position the pitch on the blades is at a greater angle than when in standard forward. This is done purposely as many transmissions have higher ratios in reverse than forward and so require a greater pitch to take into account the slower shaft rpm when in reverse.

**Gori propeller disclaims the responsibility for any damage caused by overloading the engine. In case of doubt about the engine loading, you should contact the authorized engine service agent and Gori propeller as well.*

Sailing

When sailing the blades will fold and the shaft will stop spinning giving you less drag and more speed. With mechanical transmissions you should put the shift lever into reverse (per the engine manufacturer's instructions), this will further hold the shaft stationary. Hydraulic transmissions will not rotate when under sail with the Gori propeller.

WARNING!!!

- Do not start the engine while the boat is out of the water
- The prop may have sharp edges... be careful not to cut yourself
- Make sure the blades do not open or close suddenly and trap your fingers
- Stop the engine before diving or swimming in the vicinity of the boat
- Propeller blades can cause considerable damage when rotating ... be careful.
- Do not remove fish nets, rope or similar from the prop with the engine running.
- Check that the prop works in both forward and reverse before each trip.
- If any strange sounds or vibrations are noticed coming from the propeller stop the engine and investigate the reasons/solve the problem.
- In case of problems in connection with the mounting, use or other function of the propeller, contact Gori propeller or the local agent/importer.

Distributed By

AB Marine, Inc • 747 Aquidneck Ave • Middletown • RI 02842
Tel: 401-847-7960 • Fax: 401-849-0631
Email: Sales@AB-Marine.com • Website: www.AB-Marine.com

Cleaning and Maintenance

Annual Maintenance

1. Clean your propeller with an acid cleaner such as Barnacle Buster – per MSDS, use 85% phosphoric acid with concentration of 5%-20%. If using Scotchbrite, wire brush/wheel, bead blaster or 120 grit paper, be mindful of, i.e., do not “attack”, the blade edges.

Propeller blades “work” with attached water flow - 1mm of growth on a blade causes loss of approximately 12% of its efficiency - so keep the blades clean.

2. Remove any growth on the blade gear teeth.
3. Put a light coating of a Lithium base waterproof grease on the teeth/forks/blade root – the contact moving parts. This stops surface oxidizing and ensures smooth operation.
4. If you have disassembled your GORI make sure that the Jacket/Blade assembly threads are greased so that any calcium build up is negated in the thread.
5. Paint with hard anti-foiling paint, ablative antifouling and a silicon based epoxy (i.e. PropSpeed), zinc spray or any other product that says it negates/stops growth (Lanolin etc) can be used.
6. Ensure that the coating is smooth and does not impair the operation of the blades (gear teeth, bearings, seals etc).

Underwater Installation

Underwater installation is NOT recommended, but can be accomplished by a skilled diver and appropriate tools and underwater fastener adhesives

Loctite 248 is a medium strength Threadlocker Stick that is sold to be used under water. Apply the 248 to clean dry threads out of the water and make sure the wax based product is thoroughly pushed into all of the threads (no air gaps) before taking the fastener below the water. It takes 24hrs for full cure after installation. Loctite 248 blue stick can be purchased from Fastenal

<http://www.fastenal.com/web/locations.ex>

Vibra-Tite VC-3 is an automotive product that can be used under water. Apply to the fastener threads, let dry for 10-30 minutes and install below water. VC-3 is available from most auto parts stores - we have the VC-3 in stock (used with our Shaft Shark line cutter) and can ship the same day as your order.

Do Not Use regular thread locking glue not intended for use underwater – attempts to apply it under water will ultimately fail/wash off

Bondchem WT03 Thread Locker liquid glue, supplied by Gori, and Loctite Blue 242 liquid (or Red) cannot be used under water - they cure anaerobically and must be applied to a clean dry surface as per their instructions.