

HARKEN®

INSTALLATION SHEET

IMPORTANT ADDITION TO Norseman and Sta-Lok Instructions

N15W24983 Bluemound Rd. • Pewaukee, WI 53072 U.S.A.

Telephone: (262) 691-3320 • Fax: (262) 701-5780


Web: www.harken.com • Email: harken@harken.com

Important—You Must Install the Stainless Steel Washer!

Norseman and Sta-Lok® studs are packaged with a stainless steel washer. ***This washer must be placed on the wire before the Norseman or Sta-Lok® nosepiece is put on the wire and the stud assembled.***

The washer will ride loosely on the wire above the top of the Norseman/ Sta-Lok® stud and will prevent the foils from slipping down over the top of the fitting in the event the torque tube clamp becomes loose.

You must use the washer. If the washer is not used and the foils slip down, they may unthread the Norseman/Sta-Lok® terminal thus parting the headstay.

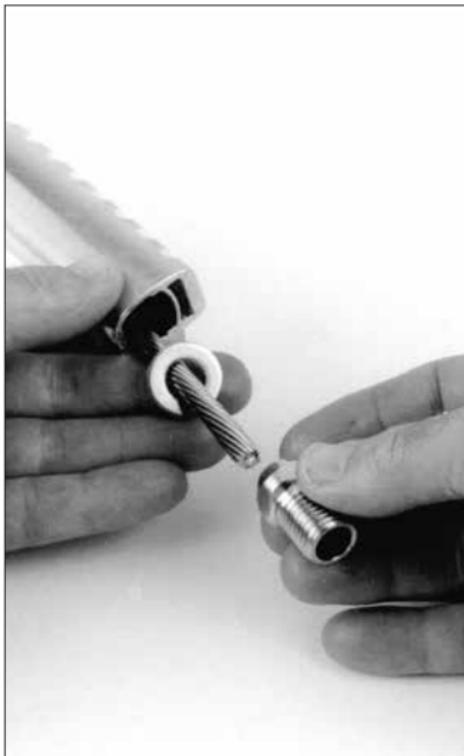

Sta-Lok® is a registered trademark of Sta-Lok Terminals, Ltd.

Maintenance

Harken equipment is designed for minimal maintenance, but some maintenance is required to give the best service and to comply with the Harken limited warranty.

In general, the most important aspect of maintenance is to keep your equipment clean by frequently flushing with freshwater.

In corrosive atmospheres, stainless parts may show discoloration around holes, rivets and screws. This is not serious and may be removed with a fine abrasive.

Important! Exposure to some teak cleaners and other caustic solutions can result in discoloration of part and is not covered under the Harken warranty.

Warranty

For additional safety, maintenance and warranty information see www.harken.com/manuals or the Harken® catalog.