


EXPLODED VIEW
52ST / 52ST FS
Version 3.0 Version 3.0.F

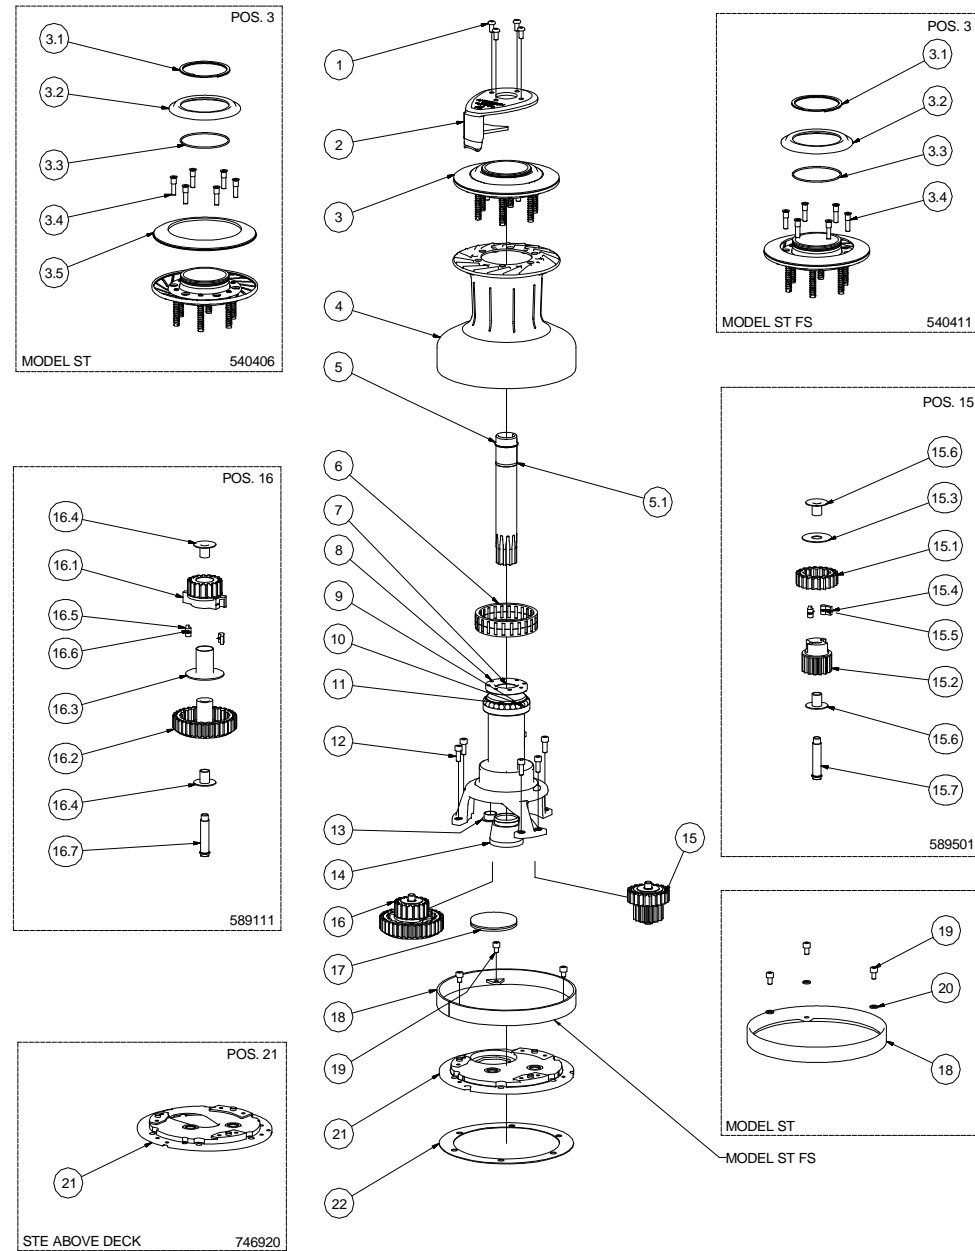

PARTS LIST
52ST / 52ST FS
Version 3.0 Version 3.0.F

POS.	QTY.	DESCRIPTION	ART. NO.
1	4	Screw	ISO7380-A4-M6x12
2	1	Self-tailing arm	594100
3	1	Self-tailing top complete	540406
3	1	Self-tailing top complete	540411
3.1	1	Cir clip	591000U
3.2	1	Top ring	521305
3.3	1	O-ring	RD100431
3.4	6	Screw	585160
3.5	1	Disc	526910
4	1	Drum complete	734401
5	1	Drive shaft complete	782811
5.1	1	O-ring	RD100302
6	1	Roller bearing complete	525905
7	1	Bushing <i>Not removable</i>	716503
8	1	Upper Base	742310
9	12	Ball, POM	526302
10	11	Ball, stainless steel	526301
11	1	Retaining ring	526600
12	6	Screw	DIN912-A4-M6x16
13	1	Bushing	877000
14	1	Bushing	734900
15	1	Small Ratchet gear complete	589501
15.1	1	Ratchet gear wheel	525200
15.2	1	Gear wheel	525103
15.3	1	Disc	524300
15.4	2	Pawl	713200
15.5	2	Arm spring	713300
15.6	2	Bushing	981410
15.7	1	Shaft for Ratchet gear	980410
16	1	Ratchet gear complete	589111
16.1	1	Gear wheel	525403
16.2	1	Ratchet gear wheel	525300
16.3	1	Bushing	525500
16.4	2	Bushing	981410
16.5	2	Pawl	713200
16.6	2	Arm spring	713300
16.7	1	Shaft for Ratchet gear	980410
17	1	Plug for deck plate	783900
18	1	Base cover	734303
18	1	Base cover	734321
19	3	Screw	DIN912-A4-M6x8
19	3	Screw	DIN912-A4-M6x10
20	3	Washer	DIN127-A4-Ø6,2
21	1	Deckplate for Above Deck STE compact motor	746920
21	1	Deckplate for Below Deck motor and manual operated winch	746910
22	1	Sealing for Aluminium deck Not included	746990
1	1	Service kit No. 21 (Not included)	710021

MOUNTING INSTRUCTION
52ST / 52ST FS
Version 3.0 Version 3.0.F

Installing the winch is easy, if you follow these instructions. The numbers in () refer to the position numbers in the parts list.

Tools required for the installation:

- Allen key (4 mm).
- Allen key (5 mm).
- Allen key (6 mm).
- Ø 8.5 mm. (11/32") drill.
- 6 pcs. M8 (5/16") bolts and nuts (length depending on deck thickness).
- 6 x large washers or backing plate.
- Ring spanner to match nuts.
- Bedding compound.

- Drill bolt holes Ø8,5mm (11/32") using the winch template. Be sure that no dust comes in contact with the winch, while drilling.
- Remove screws (1).
- Remove self-tailing arm (2) and drum (4).
- Apply a light coat of bedding compound, ensuring that each bolt hole is bedded. Keep drain grooves clear.
- Fasten lower base (21) into place using 6 pcs. M8 (5/16") bolts. Use large washers or a backing plate.
- Assemble in reverse order.
- Check that the winch is functioning correctly:
The drum should operate smoothly, by turning the drum clockwise by hand.
The drum must not turn when trying to turn the drum anti clockwise.
While turning the winch handle clockwise the drum should turn slowly.
While turning the winch handle anti clockwise the drum should turn fast.

SERVICE INSTRUCTION
52ST / 52ST FS
Version 3.0 Version 3.0.F

Tools required for service:

- Allen key (4 mm.).
- Allen key (5 mm.).
- Screwdriver (small).
- Winch handle.
- ANDERSEN winch grease



- Remove screws (1).
- Remove self-tailing arm (2) and drum (4).
- Remove screws (12).
- Remove upper base (8), and place it in a safe and comfortable place before dismantling it !
- Remove drive shaft (5). by using a finger or a winch handle.
- To release the roller bearing (6), gently insert a small screwdriver between roller bearing and base plate (8). Remove roller bearing.
- Remove shafts (15.7, 16.7).
- Remove and dismantle the two gear units.
- Clean all parts in benzine. Remember to clean the gear teeth, roller bearing track and bushing inside the drum (4).
- Assemble in reverse order. During assemble, lightly grease all gear teeth, drive shaft, roller bearing, shafts, pawls, springs and bushings by the use of a small soft brush. Pawls should only be lubricated with a very thin film of ANDERSEN WINCH GREASE. It is very important that pawls can move freely.


IMPORTANT: When assembling the winch, check the functioning of each pawl by pushing the pawl against the spring. The pawls should move smoothly and automatically return to their normal position, where the pawls engage with the teeth. If the pawls do not function correctly, clean and lubricate the pawls and gears. Check the function of the pawls again to make sure that it works correctly. If the pawls do not work correctly replace the springs and recheck the function. Malfunctioning pawls may lead to unexpected failure of a loaded winch resulting in material damage or fatal personal injury.


Service Kit No. 21 (art. no. 710021) contains spare parts for this winch.

IMPORTANT INFORMATION


ALL WINCHES


  **Read All Safety Notices and Product Manuals**
Do not install or operate this winch before reading and fully understanding the contents of this Safety Notice Sheet and the Product Manual.


 **Stay Alert When Operating**
Andersen winches are very powerful and have the potential to cause significant damage and/or serious injury if used improperly or without due caution and vigilance.

 **Operators Must Be Trained**
Help prevent significant damage and/or serious injury by ensuring any person operating a winch has a thorough understanding of its proper operation and is aware of the potential hazards involved. As a minimum, all winch operators must read and understand this Safety Notice Sheet and the Product Manual.
Particular attention is drawn to the following points:

- Children and others not qualified to operate an electric winch must be kept at a safe distance from the winch and any rigging or fittings that are under load.
- Long hair and/or loose clothing must be tied back to avoid being caught in the winch.
- In the event of a rope override or other fault, stop the winch and turn off power before attempting to resolve the problem.

 **Avoid Accidental Operation**
Remove winch handles and turn off power to the winch when not in use to help avoid unsupervised or unintentional operation. Failure to do so could result in significant damage and/or serious injury.

 **Maintenance**
Turn off power to the winch before performing any maintenance or service tasks. Failure to do so could result in significant damage and/or serious injury.

 **Lifting Operations**
The winch must not be operated with the rope in the self tailer when used in any kind of lifting operation.
Any lifting operations should be conducted by two persons in order to maintain constant visual contact with the object being lifted.
Furthermore the selftailer must not be used as a cleat for a rope used to lift or suspend any object. The rope must be secured properly by tying off, or leading to a suitable fitting such as a cleat or bollard.

Failure to observe these precautions could result in serious injury or death.

DO NOT DISCARD

28. februar 2013 - Part no. 710252

WARRANTY

Refer to our website www.ronstan.com/warranty for our warranty terms and conditions

WORLD WIDE DISTRIBUTION & SERVICE

VISIT WWW.ANDERSENWINCHES.COM)



Manufactured by: Ronstan Denmark ApS. - Jægervej 36 - 7100 Vejle - Denmark
info@andersenwinches - www.andersenwinches.com



Manual

52ST / 52ST FS


Version 3.0 Version 3.0.F



PAWL SPRING MOUNTING

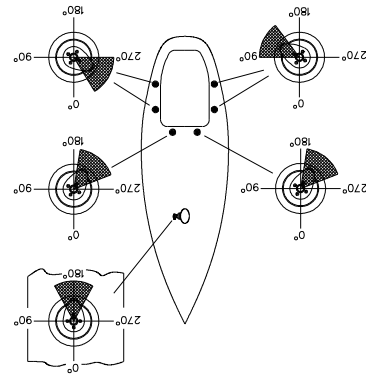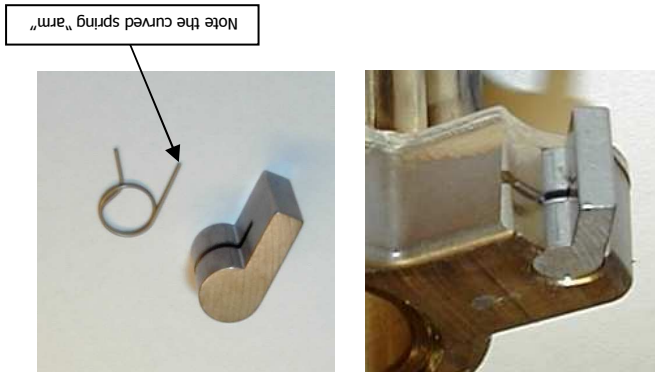

To ensure the best possible functioning of the winch, we recommend that the winch is placed in accordance with the line entry shown below.

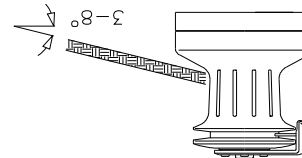

Be also aware that selftailing arm is positioned correctly. We recommend to have the selftailing arm positioned within the shaded area. On 12ST and 28ST the position of the selftailing arm is fixed, making it very important to establish the proper location of the holes prior to drilling these in the deck. On all other models, the selftailing arm can be placed in several different positions after having installed the winch.

Due to the best choice of materials and high precision in manufacturing, we recommend, for normal use, only to dismantle, clean and lubricate the winch once every second year. Under extensive use, such as racing, charter or blue water sailing, we recommend to lubricate the winch once every year. We strongly recommend always to use ANDERSEN WINCH GREASE, when lubricating your winch. ANDERSEN WINCH GREASE is a high quality silicone/Teflon grease product. Most other types of grease, including "marine grease" are not suitable for lubrication of winches. Non-suitable grease products can cause malfunction, which could result in fatal injuries for the user and others. Pawl arm springs should be replaced every second year. Spare arm springs and other parts that may be required are included in the ANDERSEN Service Kit. Please refer to the service instruction for the Service Kit suitable for the specific winch. When the winch handle is not in use but the winch is under load, we recommend, from a safety point of view, to remove the winch handle from the winch. To ensure correct function of the selftailing unit, only use recommended line sizes. When using the winch with mooring lines DO NOT use the selftailing function and be sure that the mooring line is not in contact with the selftailing arm.

GENERAL INFORMATION